




# OWNER'S MANUAL


## RADIO BOOST CD

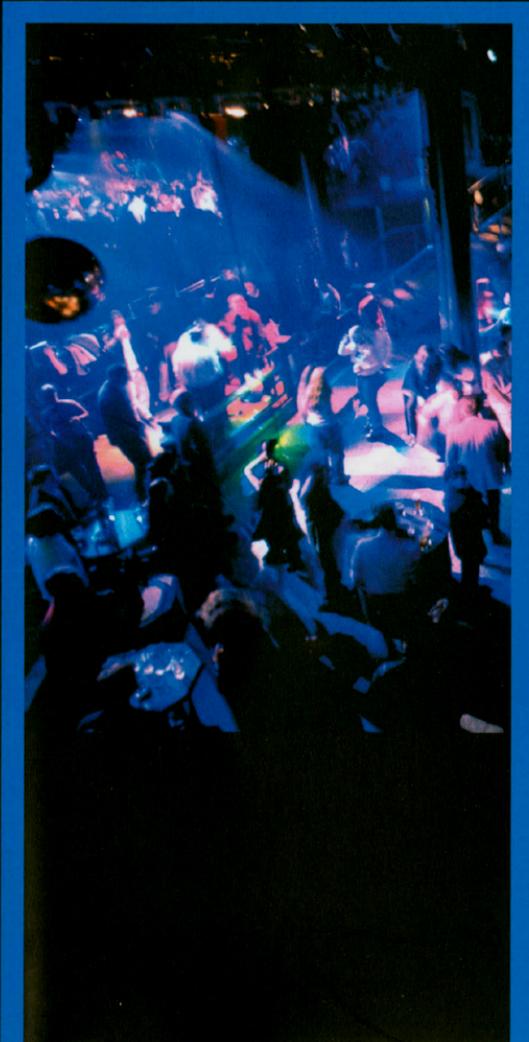

OVERVIEW

SETTINGS

# OVERVIEW

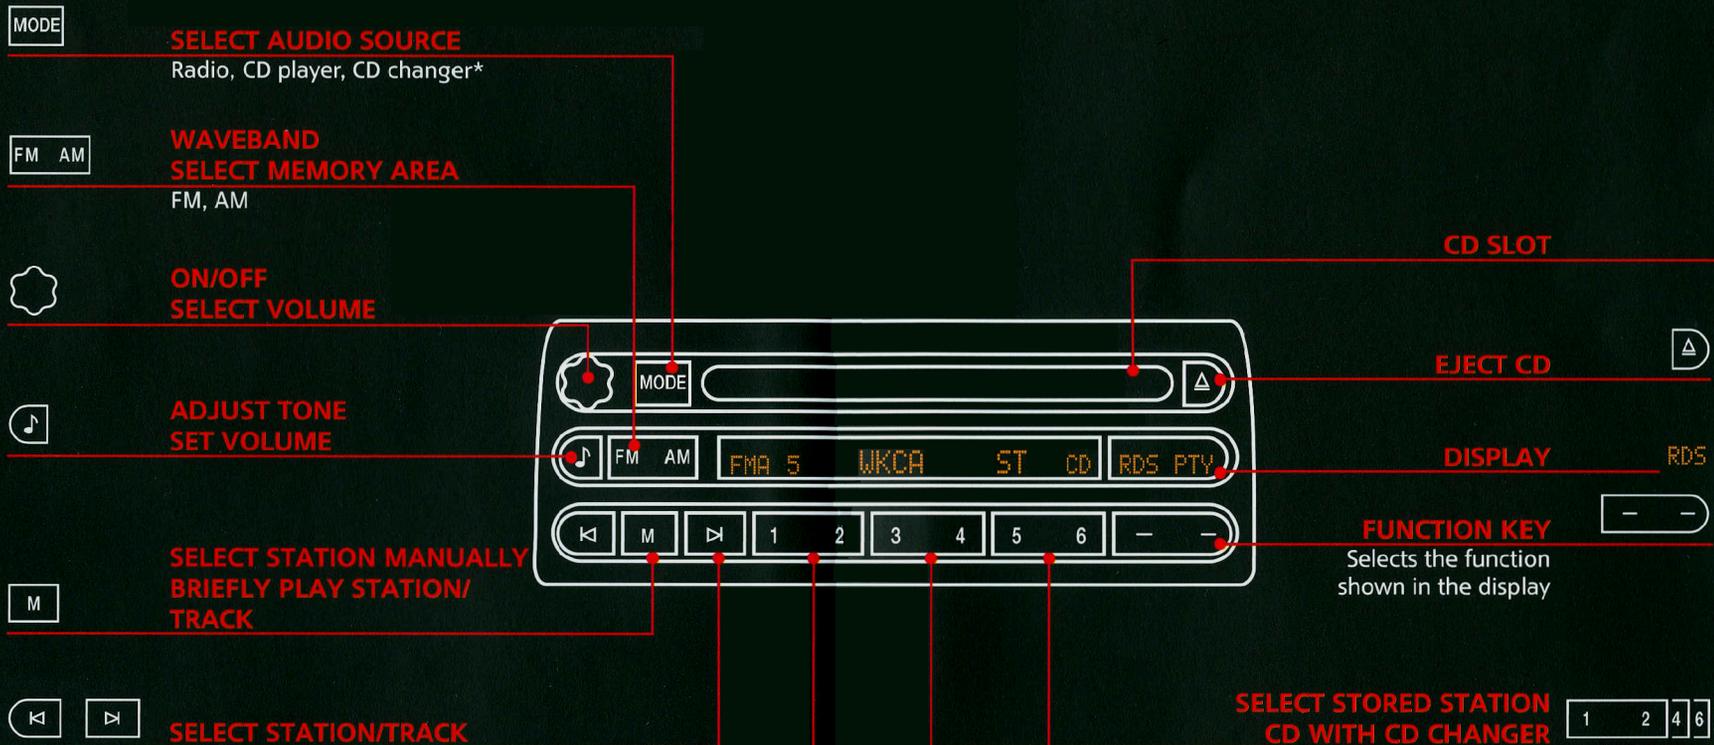

\* Indicates special equipment, country-specific equipment and optional extras, as well as equipment and functions not yet available at the time of printing.

Your MINI center is always happy to answer any questions you may have.

© 2004 Bayerische Motoren Werke  
Aktiengesellschaft  
Munich, Germany  
Reprinting, including excerpts, only with the  
written consent of BMW AG, Munich  
Order No. 01 41 0 158 364  
US English VII/04  
Printed in Germany

# SETTINGS

## ADJUST VOLUME

### SPEED

Volume increase dependent on speed  
With Harman/Kardon\* speaker system,  
automatic adjustment



Press long



Press briefly several  
times



Turn



Press briefly

### NAVIGATION

Minimum volume for voice instructions



Press long



Press briefly several  
times



Turn



Press briefly

### RESET SETTINGS

Reset to midrange setting



Press long



Press briefly several  
times



Press briefly

## ADJUST TONE

Lows (BASS), highs (TREBLE), volume distribution  
front/rear (fader), left/right (balance)



press briefly



Turn



Press briefly

## ADJUST SPEAKER SYSTEM\*

Select Harman/Kardon tone simulation  
and surround-sound effects, sample effects



Press briefly several  
times



Turn



Press briefly

## OPTIMIZE TONE

With Harman/Kardon: Tone is optimized on  
the driver's side

Select sample effects



Press briefly



Press briefly



Press briefly

## RESET TONE SETTINGS

Reset to midrange setting



Press long



Press briefly

## SELECT WAVEBAND/MEMORY AREA

FM: FM1, FM2, FMA  
AM: AM, AMA



 
Press briefly

or



Press briefly

## SELECT STATION




Press briefly

## SELECT STATION MANUALLY



 Press briefly



Press briefly


## STORE CURRENT STATION

 Six stations can be stored per memory area.

Select memory area



Select station



Press long (1 - 6)

Station can be heard again following a brief interruption.

## STORE AUTOMATICALLY

The 6 strongest stations are automatically stored.

Select FM memory area



Press long

or

Select AM memory area



Press long

## CALL STORED STATION

Select memory area



Press briefly (1 - 6)

## BRIEFLY PLAY STATION ON/OFF

Briefly listen to all receivable stations

 


Press long

When switching off, the last station briefly played is retained.

## RDS ON/OFF

Transmits additional information in the FM waveband, e.g. station name




Press briefly

On/Off is briefly confirmed

## REGIONAL PROGRAMS ON/OFF

 Transmits certain regional programs in the FM waveband



Press long

On/Off is briefly confirmed

## DISPLAY PROGRAM TYPE (PTY)

Reception of additional information



Press briefly

Program type is displayed

 
## AUTOMATIC PTY DISPLAY

Automatic display of station type



Press long

OFF



Press long

**START CD PLAYER**

CD with labeled side up

Insert CD

CD player starts

or

 


Press briefly several times

**START CD CHANGER\***



Press briefly several times




Select CD

**MP3 - NEXT FOLDER**

Switching between folders with compressed audio files




 Press briefly




Press briefly

**NEXT TRACK**

 

Press briefly

**FORWARD/REVERSE**

 

Press long


**RANDOM ORDER ON/OFF**

 Play all tracks of a CD using random playback



Press briefly

**REPEAT TRACK ON/OFF**



Press long

**BRIEFLY PLAY TRACKS ON/OFF**

Briefly play all tracks




Press long


When switching off, the last track briefly played will be retained.

**FILL CD MAGAZINE\***


The changer is located in the luggage compartment at the rear right.

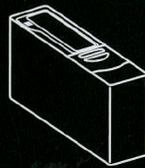

Push lid toward right

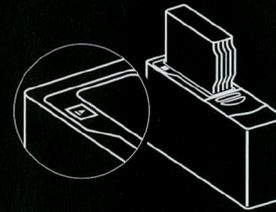

Press button  
Remove magazine

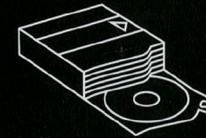

Insert CD with labeled side up



Do not operate CD player with damaged cover, as otherwise serious eye injuries can result.

Do not use CDs with labels applied after purchase, as otherwise labels can detach during playing and damage the system.

Only use round CDs with a standard diameter of 4.7 in (12 cm) and do not play CDs with an adapter, e.g. single CDs, as otherwise the CDs or the adapter may jam.

Do not use combined CD/DVDs, as otherwise these may jam.

CDs with copy protection may only permit restricted playback. In this case, contact the dealer or manufacturer of the CD.

**HEAR ME.**

01 41 0 158 364 ue



**RADIO**

**CD**